



- ESC (MENU)
- UP
- OK
- LEFT
- RIGHT
- SWITCH
- DOWN

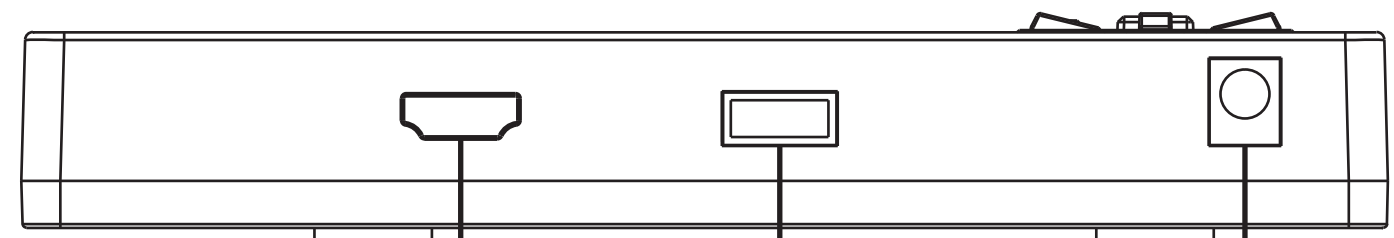

- HDMI
- USB(Only for Upgrading)
- DC IN

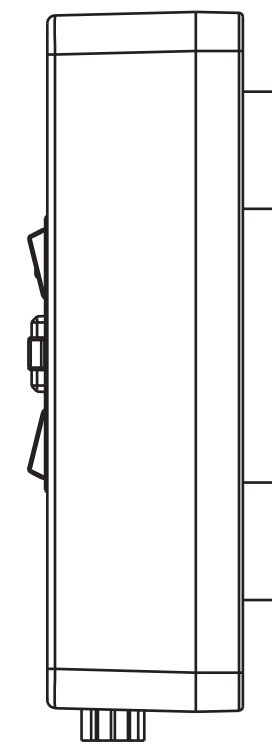