

# Time Timer® Watch

## User Guide



 
 
 
# GET STARTED!

The **Time Timer Watch** uses a red disk to visually depict how much time remains. As time elapses clockwise, the disk gradually disappears, helping you see and manage time more effectively.



Visit [timetimer.eu](https://www.timetimer.eu) to view our instructional video.

# STEP 1: INSERT BATTERY

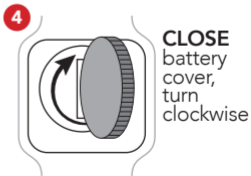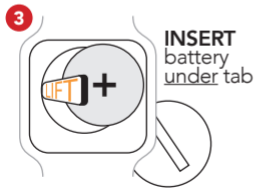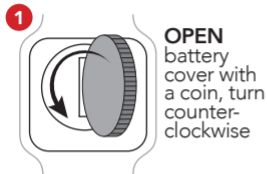

## STEP 2: SELECT WATCH MODE

Time Timer Watch has 3 modes:

**Clock**



**Time Timer**



**Alarm**



Press the **MODE** button on the upper right to toggle between modes.

**Clock mode:** The Clock mode displays time of day using both a traditional analog clock face and a digital numeric display. If a Time Timer is running or an Alarm has been set, a unique icon displays on the right side of the watch face. Time can be viewed in 12- or 24-hour format.

**Time Timer mode:** The Time Timer mode includes two options: 1) Original 60-minute Timer Disk or 2) Custom Timer Disk. The Custom Disk Timer allows the disk to be scaled to represent any duration from 1 minute to 99 hours. A numeric display of time remaining is shown below the red disk. Alert can be set to audible, vibrate, both, or no alert.

**Alarm mode:** The Alarm mode can be set in 12- or 24 hour time formats. Set alert to activate alarm. Alert can be set to audible, vibrate, both, or no alert.

## STEP 3: ADJUST WATCH MODE

- 1 Press **SET** for 3 seconds to start.
- 2 The first setting will start to flash.
- 3 Press (+) and (-) to adjust time or to toggle between setting options.
- 4 Press **NEXT** to continue or **SET** to confirm and exit.

A time-out will occur after 20 seconds of inactivity.  
Press **SET** for 3 seconds to restart.

TIME TIMER

SET



NEXT



-



+



## QUICK REFERENCE

 and set

Quick tap activates screen backlight.

Press and hold for 3 seconds to customize settings within each mode.

start | stop

Starts or stops timer in Time Timer mode.

Press and hold to reset timer.







## mode

Toggles between 3 watch modes:  
**Clock, Time Timer, Alarm**

Press any button to silence alarm.



Toggles between 4 alarm options  
in Time Timer and Alarm mode:  
**audible, vibrate, audible + vibrate, no alert**

## SETTINGS KEY



Indicates alarm is set



Audible alarm



Vibrate alarm



Audible + vibrate alarm



No alert (silent) alarm



60-minute timer, up to 60 minutes



Custom timer, up to 99:59 minutes



Repeat timer



One-time timer

12  
HR

24  
HR

Clock mode

# CLOCK MODE SETTINGS

Press SET button for 3 seconds to begin modifying settings.



Indicates  
Time Timer  
is running



Indicates  
Alarm is set

12  
HR  
10:23 12 AM

1

0:00 00

Set hour,  
minutes, and  
seconds

2

12 24  
HR HR

Select 12- or  
24-hour  
clock mode

 
3

AM  
PM

Select AM or  
PM for 12-hour  
mode only

## TIMER MODE SETTINGS

Press SET button for 3 seconds to begin modifying settings.

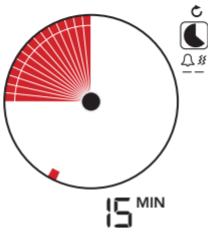

1

0:00 00

Set hour  
or minutes

2



Select alarm:  
audible, vibrate,  
both, or no alert

3



Select timer:  
60-minute or  
custom timer

4



Select  
repeat timer  
or one-time

# ALARM MODE SETTINGS

Press SET button for 3 seconds to begin modifying settings.



1

0:00 00

Set hour  
or minutes

2

AM  
PM

 
Select AM or  
PM for 12-hour  
mode only

3



Select alarm:  
audible, vibrate,  
both, or no alert

## BAND REMOVAL

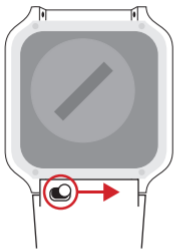

1

Slide lever  
inward to  
unlock band.



2

While holding lever,  
release left pin,  
then right pin.

Follow steps in reverse to replace a band.

## COMMON QUESTIONS

**Is watch water resistant?** Watch is water resistant as long as buttons are not pressed while wet. Recommended to keep away from saltwater exposure.

**How do I set a repeat feature?** In Time Timer mode only, follow step 4 and select the repeat timer option: 

**Why do my settings time-out?** A time-out will occur after 20 seconds of inactivity. Press **SET** for 3 seconds to restart.

### **What are the watch default settings?**

Clock - active state (12hr)

Timer - 15 minute (Original 60-minute Timer Disk)

Alarm - 8:00 AM (no alert)

**What is the battery life?** The expected life of the battery is approximately eight months, based on typical use. If the watch is used to time a short duration (or left running) on the repeat function with vibrating alert, then the battery life will be significantly shorter due to the higher battery requirements for vibration. If a spontaneous watch reset to original factory settings occurs, there is no backlight or a dim display, please replace the battery.

**What type of battery is it?** CR2032

## **ONE-YEAR 100% SATISFACTION GUARANTEE**

Every Time Timer® Watch comes with a 1-year warranty that covers all manufacturing and material defects. It does not cover the battery, nor the damage caused by abuse, misuse or common wear and tear.

## **QUESTIONS? WE'RE HERE TO HELP.**

info@robo-toys.com



*Download these  
instructions in other  
languages:*



**Make Every Moment Count!®**

**timetimer.eu**

Time Timer Europe, Seggelant West 9/G, 3237 MJ Vierpolders, The Netherlands  
Designed and engineered in the U.S.A. Time Timer is a registered  
trademark of Time Timer LLC. Patent Protected.

© 2022 Time Timer LLC. All rights reserved. Made in China. 202206V8