OPERATION MANUAL – for Pre-Set Timer TT01-XX

This system pre-set timer provides a countdown for 7, 30 or 90 days, depending on the model purchased.

THE KEYS

S1 – Start/Stop key; Press to start countdown. Press again to stop counting. After countdown reaches zero, press to stop aural alert, and to stop counting.

S2 - Reset key; Press to reset timer to pre-set time whilst counting is stopped.


HOW TO OPERATE THE TIMER

- Make sure the screen is displayed.
 If no display, the battery may not be installed or its power is exhausted.
 Refer to 'Battery Replacement' paragraph to install a fresh battery.
- 2. Press 'S1' to stop any counting if counting is observed. Press 'S2' to reset timer to pre-set time.
- 3. Press 'S1' to start countdown. Press 'S1' again to stop counting temporarily. Press 'S1' again to re-start counting.
- 4. After countdown reaches zero the aural alert is activated, i.e., beeping 6 times, then repeats after each 10 seconds. The timer does not stop beeping unless the 'S1' button is pressed.
- 5. After the aural alert is stopped, press 'S2' to reset the timer to the pre-set time, and start the next cycle counting by pressing 'S1'.

BATTERY REPLACEMENT

One piece of LR44 or equivalent is used. Follow the steps below to replace battery:

- 1. To open the back cover, use a small flat '-' screw driver to insert in the position of the arrow shown in Fig. b.
- 2. Use the same screw driver to push the battery out of the metal holder as shown in the following drawing.

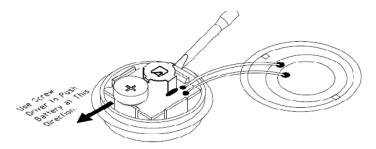



Serv-Timer

- 3. Discard the old battery.
- 4. Insert a fresh battery into the metal battery holder (positive side up).
- 5. Replace the back cover. Be sure the "Made in Taiwan" mark is at the lower position.

