

Digital Day Clock

User Manual

Important Note: the buttons on the back of your clock are labeled with symbol only, please use the clearly labeled photo illustration below to identify the appropriate button functions to set your clock.

SET TIME:

Press the **Exit** button to access the set-up screen.


Press the **RIGHT/LEFT** button to highlight the field to be modified.

A small blue highlighted square box will appear over the number to be changed.

Use the **UP/DOWN** button to adjust the number

After the modifications are completed, press **OK** button to save.

Press the **Exit** button to go back to the main screen.

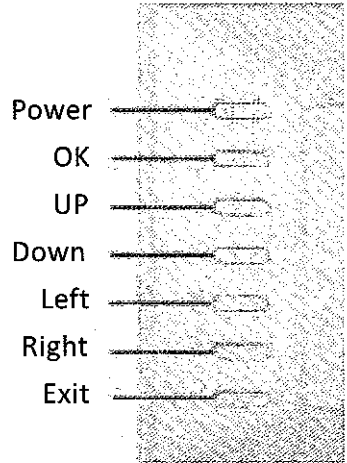

SET DATE:

Press the **Exit** button to access the set-up screen.

Press the **DOWN** button to highlight the 3rd line.

Press the **RIGHT/LEFT** button to adjust the number

After the modifications are completed, press the **OK** button to save.

Press the **Exit** button to go back to the main screen.

Language Set	<	English	>
Time Set	<	10:09:47	>
Date Set	<	16-01-2021	>
Time Mode	<	24 Hour	>
Date Mode	<	Day-Month-Year	>
Auto Dimming	<	low	>
Volume Set	<	18	>
Alarm Set	<		>
Medicine Reminder	<		>
Factory reset	<	V4.0	>

TIME MODE:

Press the **Exit** button to access the set-up screen.

Press the **DOWN** button to highlight the 4th line.

Press the **RIGHT/LEFT** button to switch between:

12 Hour (am/pm)

24 Hour (Military time)

Press the **MENU** button to go back to the main screen.

DATE MODE:

Press the **Exit** button to access the set-up screen.

Press the **DOWN** button to highlight the 5th line.

Press the **RIGHT/LEFT** button to switch between:

Month-Day-Year (standard U.S. mode)

Day-Month-Year (standard European/AU mode)

Press the **EXIT** button to go back to the main screen.

LANGUAGE:

Press the **Exit** button to access the set-up screen.

Press the **DOWN** button to highlight the 1st line.

Press the **RIGHT/LEFT** button to select a language

(choice of: English, French, German, Dutch, Italian, Polish, Spanish, Portuguese...) Press the **EXIT** button to go back to the main screen.

BRIGHTNESS:

Press the **MENU** button to access the set up screen.

Press the **DOWN** button to highlight the 6th line.

Press the **RIGHT/LEFT** button to select

(choice of: auto,off,mid,low)

Press the **MENU** button to go back to the main screen.

Volume:

Press the **MENU** button to access the set up screen.

Press the **DOWN** button to highlight the 7th line.

Press the **RIGHT/LEFT** button to select a language
(choice of voice level : 0-40...)

Press the **MENU** button to go back to the main screen.

ALARM:

Press the **MENU** button to access the set up screen.

Press the **DOWN** button to highlight the 8th line.

Press the **RIGHT/LEFT** button to select a language
(choice of: 5 alarms and 3 reminders...)

Press the **MENU** button to go back to the main screen.

Note:

To make several modifications to set up screen, after each change simply press **DOWN** button to highlight the next field that you would like to modify and follow the instructions above.

After all the modifications are completed, press the **Exit** button to go back to the main screen.



TabTimer.
helping to keep people on time

www.TabTimer.com.au

1300 TAB TIMER (1300 822 846)

ABN: 99 137 415 948