OPERATION INSTRUCTION 4 - ALARM TALKING WATCH

AMUW990909A

FEATURES

routines more efficiently. For example, you can set up the 4 talking alarms

This 4 - Alarm Talking Watch provides useful functions to run your daily

hour.

Talking Stopwatch with Lap - lets you keep track of your time spent on

Hourly Time Announcement - lets you hear the time every hour on the

100 Year Calendar - gives you the correct date from 2000 to 2099.

announcement.

to remind you of 4 medicine-taking time, or use the talking stopwatch to

activitives and record lap times.

time and track your activities. Its features include: Time and Date Announcement - let you hear the time as well as date

Four Talking Alarms - helps remind you of daily routines.



SETTING THE TIME, 12H/24H, YEAR, MONTH AND DATE

Note: While setting the time and date, if you do not press any key for more than 1 minute, the watch will confirm and return to the current time display.

Follow these steps to set the date and time.

- Repeatedly press MODE until you hear the time announcement and the display shows the time and day of the week.
 Press and hold down SET for more than 2 seconds until you hear
- "Time set" and the 24H or 12H digits flash on the display.
- Repeatedly press ADJ to select 12H or 24H.
- 4. Press SET, you hear "hour set" and the hour digits flash.
 - Repeatedly press (or hold down) ADJ to set the correct hour. The watch announces the hour as it advances on the display.

0

Press SET, you hear "Minute set" and the minute digits flash.

Repeatedly press (or hold down) ADJ to set the correct minute. The watch announces the minute as it advances on the display.

Repeatedly press **ADJ** to set the correct year.

Press **SET**, you hear "Month set" and the month digits flash.

Repeatedly press ADJ to set the correct month.

Press SET, you hear "Year set" and the year digits flash.

Press **SET**, you hear "Date set" and the date digits flash. Repeatedly press **ADJ** to set the correct date.

Proce MODE to complete setting and return to

Press MODE to complete setting and return to the time display

LISTENING TO THE TIME AND DATE ANNOUNCEMENTS

To hear the time announcement, simply press **TALKING**. The watch announces for example "It is 10: 25 AM".

To hear the date announcement, press **SET**, the watch reports for

example "Today is the twenty-third" if date 10 23 appears on the display (October is not announced). Press SET again, it displays the year, press SET again to return to normal time display.

SETTING THE ALARM TIME

The watch lets you set 4 daily alarms, follow these steps to set the alarm.

1. Repeatedly press **MODE** until you hear "Alarm One" and **AL** and – 1

- appear on the LCD.
- Press and hold down SET for more than 2 seconds until you hear "Alarm 1 set, hour set" and the hour digits flash on the display.
- Repeatedly press (or hold down) ADJ to set the hour. The watch announces the hour as it advances on the display.

4. Press SET, you hear "Minute set" and the minute digits flash. 5. Repeatedly press (or hold down) ADJ to set the minute. The watch announces the minute as it advances on the display. Press MODE to complete Alarm 1 time setting. 7. Repeatedly press ADJ until you hear "Alarm 1 on" and " 4 "appears on the display to turn on the alarm. 8. Repeat steps 1 to 7 to set alarm 2, 3 and 4. 9. Repeatedly press MODE until you hear the current time announcement to return to the time display. Note: While setting the Alarm time, if you do not press any key for more than 1 minute, the watch will confirm and return to the Alarm time display.

TURNING THE ALARM ON AND OFF You can easily turn on and turn off the alarm using the following steps.

- Repeatedly press MODE until you hear "Alarm one"
- 2. To turn on the alarm, repeatedly press ADJ until you hear "Alarm one
 - ADJ again and you hear "Alarm One Off" and " \P " disappears.
 - 3. Press MODE to go to Alarm 2 and repeatedly press ADJ to turn on/off alarm 2. 4. Repeat step 3 for Alarm 3 and Alarm 4.

on" and " 🚀 " appears on the display. To turn off the alarm, press

- At the preset alarm time, the alarm sounds for 1 minute and turns off
- automatically. To silence the alarm sooner, press any key. The following is an example of the alarm sound. "Alarm 2, Good morning, it is 7:30 AM, di, di, di, di" repeating for one
- minute.

TURNING THE HOURLY TIME ANNOUNCEMENT ON OR OFF You can set the watch to announce the time every hour on the hour. To

turn on the hourly report, repeatedly press ADJ until you hear "Hourly report on" and " (((•))) " appears on the display. To turn off the hourly report, press ADJ again and you hear "Hourly report off" and " (((•)))" disappears. The following is an example of hourly announcement. "It is 8:00 PM".

USING STOPWATCH (COUNTUP TIMER)

appears on display.

The maximum count up timer (stopwatch) is 24 hours. When the timer reaches 23:59:59, it resets to 0:00 00 and begins counting up again. Follow these steps to operate the stopwatch. 1. Repeatedly press MODE until you hear "Stopwatch" and "ST"

- 2. If the display does not show 0:00 00, follow these steps to reset to

0:00 00.

Case 1: when the timer is not running (digits do not change, and ":" is not flashing): press SET once or twice until "0:00 00" appears on the display.

Case 2: when the timer is running in the front (digits are changing): Press ADJ then SET to reset to 0:00 00.

Case 3: when the timer is running in the background (digits do not change, and ":" is flashing): press ADJ then SET twice to reset to 0:00 00.

- 3. Press ADJ to start the timer. The stopwatch starts and announces timing.
- 4. To stop or pause count up, press ADJ. To resume the timer, press ADJ again and the stopwatch timer continues from the displayed time.
- To reset the timer to 0:00 00, press ADJ to stop the timer, then press SET.

RECORDING LAP TIMES

The lap function lets you freeze the display, document the timed reading, and then return to the stopwatch timer to see the advancing time. You can monitor lap times continuously as long as the stopwatch continues to run.

Follow these steps to measure lap times.

- Repeatedly press MODE until you hear "Stopwatch" and "ST"
 - appears on the display.

 Note: If the display does not show 0:00 00, follow the steps described in USING STOPWATCH to reset to 0:00 00.
- Press ADJ to start the stopwatch timer.
- When the first lap is finished, press SET. The stopwatch display freezes, but the stopwatch timer continues to run in the background. The ":" in the elapsed time flashes.

- When you have documented the lap time, press SET. The display changes to show the advancing time (was in the background) on the stopwatch timer.
- 5. Repeat Steps 3 and 4 for each additional lap.
- Press ADJ to stop the stopwatch. Then press SET to reset the display to 0:00 00.

The stopwatch announces the elapsed time according to the following:

Elapsed time to 9 seconds 10 to 59 seconds 1 to 9 minutes 10 to 59 minutes

1 to 23 hours

Voice Announcement

every second every 10 seconds

every minute every 10 minutes

every hour

During timing, you can press TALKING to hear the voice announcement at any time.

REPLACING BATTERY

This watch uses one CR2016 Lithium battery for power, if the watch works improperly or the display dims, follow these steps to replace the lithium battery.

Follow these steps to install or replace battery. 1. Locate the gap in between the back case and the watch body, insert

- a small flat-end screwdriver into the gap and pry open the back case.
- 2. Use a small screwdriver to remove the screw holding the battery bar.
- 3. Remove the old battery and install a new one with the positive side (+) up.
- 4. Replace the battery bar and secure it with the screw.
- 5. Replace and snap the back case to the watch by pressing the back case to the watch body.